



# KURT® PINLOCK™


## Mounting System Installation Instructions

### PRIMARY AND SECONDARY LINER BUSHINGS

- Drill hole through approximately 0.030" under bore diameter
- Finish bore "A" not to exceed 0.0005" smaller than actual O.D.
- Press liner bushing into the bored hole

NOTE: Installed bushings should be approximately 0.012" below the subplate surface and centered

| Shank Dia.<br>(MM) | Primary Liners<br>Part Numbers | Secondary Liners<br>Part Numbers | Liner O.D.<br>+.0000/ -.0004 |
|--------------------|--------------------------------|----------------------------------|------------------------------|
| 20mm               | PL20LBP-075                    | PL20LBS-075                      | 1.3772                       |
|                    | PL20LBP-100                    | PL20LBS-100                      |                              |
| 25mm               | PL25LBP-075                    | PL25LBS-075                      | 1.3772                       |
|                    | PL25LBP-100                    | PL25LBS-100                      |                              |
| 30mm               | PL30LBP-075                    | PL30LBS-075                      | 1.7523                       |
|                    | PL30LBP-100                    | PL30LBS-100                      |                              |
| 35mm               | PL35LBP-075                    | PL35LBS-075                      | 1.7523                       |
|                    | PL35LBP-100                    | PL35LBS-100                      |                              |
|                    | PL35LBP-150                    | PL35LBS-150                      |                              |
|                    | PL35LBP-200                    | PL35LBS-200                      |                              |
| 50mm               | PL50LBP-075                    | PL50LBS-075                      | 2.5025                       |
|                    | PL50LBP-100                    | PL50LBS-100                      |                              |
|                    | PL50LBP-150                    | PL50LBS-150                      |                              |
|                    | PL50LBP-200                    | PL50LBS-200                      |                              |

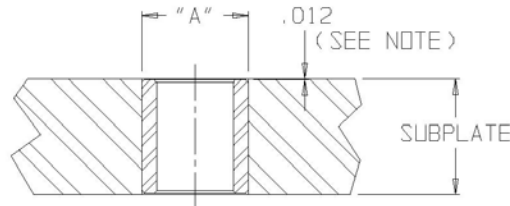

www.kurtworkholding.com  
Phone: 763.574.8309  
Toll Free: 877.226.7823  
Fax: 763.574.8313



# KURT® PINLOCK™


## Mounting System Installation Instructions

### PRIMARY AND SECONDARY LINER BUSHINGS

- Drill hole through approximately 0.030" under bore diameter
- Finish bore "A" not to exceed 0.0005" smaller than actual O.D.
- Press liner bushing into the bored hole

NOTE: Installed bushings should be approximately 0.012" below the subplate surface and centered

| Shank Dia.<br>(MM) | Primary Liners<br>Part Numbers | Secondary Liners<br>Part Numbers | Liner O.D.<br>+.0000/ -.0004 |
|--------------------|--------------------------------|----------------------------------|------------------------------|
| 20mm               | PL20LBP-075                    | PL20LBS-075                      | 1.3772                       |
|                    | PL20LBP-100                    | PL20LBS-100                      |                              |
| 25mm               | PL25LBP-075                    | PL25LBS-075                      | 1.3772                       |
|                    | PL25LBP-100                    | PL25LBS-100                      |                              |
| 30mm               | PL30LBP-075                    | PL30LBS-075                      | 1.7523                       |
|                    | PL30LBP-100                    | PL30LBS-100                      |                              |
| 35mm               | PL35LBP-075                    | PL35LBS-075                      | 1.7523                       |
|                    | PL35LBP-100                    | PL35LBS-100                      |                              |
|                    | PL35LBP-150                    | PL35LBS-150                      |                              |
|                    | PL35LBP-200                    | PL35LBS-200                      |                              |
| 50mm               | PL50LBP-075                    | PL50LBS-075                      | 2.5025                       |
|                    | PL50LBP-100                    | PL50LBS-100                      |                              |
|                    | PL50LBP-150                    | PL50LBS-150                      |                              |
|                    | PL50LBP-200                    | PL50LBS-200                      |                              |

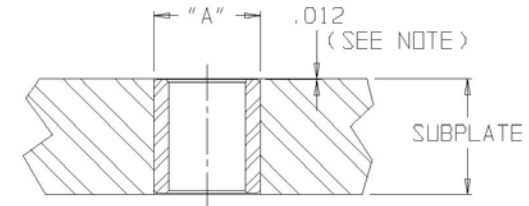

www.kurtworkholding.com  
Phone: 763.574.8309  
Toll Free: 877.226.7823  
Fax: 763.574.8313

