



QUICK REFERENCE GUIDE

Kurt TriLock Vise Through-Body Mounting

(TOP OF VISE)

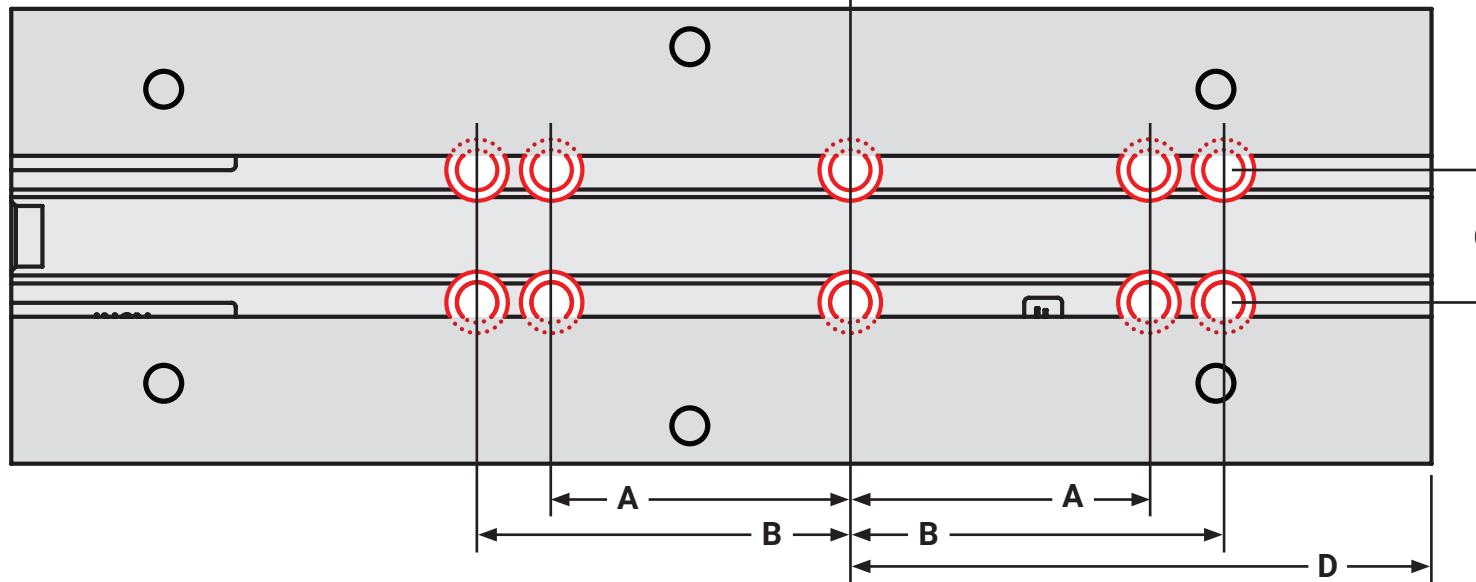

NOTE: Requires LOW HEAD fasteners and T-nut, which are not included with the vise and must be purchased for specific machine setup. We recommend using a long hex bit socket to access fastener heads.

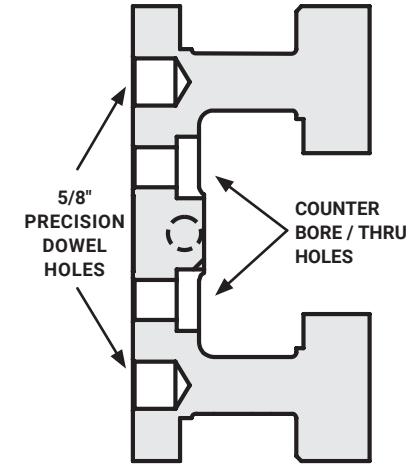

(CROSS SECTION X)

VISE	A	B	C	D	FASTENER / LOW HEAD SHCS	COUNTER BORE / THRU HOLE	T-SLOT	DIRECT MOUNT
TL4CS Standard	100 mm	125 mm	1.150"	7.5"	3/8" / M10	└─ Ø 0.685" x 0.256" DP / 0.425" Thru	100 mm	Brother SX00XD2 Series
							125 mm	Haas VF2
TL4SCS Short	100 mm	125 mm	1.150"	7.5"	3/8" / M10	└─ Ø 0.685" x 0.256" DP / 0.425" Thru	100 mm	Brother SX00XD1 Series
							125 mm	Fanuc RoboDrill / Fits PC2 Pallet Changer
TL6CS Standard	80 mm	N/A	1.750"	9.688"	1/2" / M12	└─ Ø 0.813" x 0.296" DP / 0.531" Thru	80 mm	Haas VF3 / VF4 / VF5, Mazak VC-EZ 20/26
TL6SCS Short	100 mm	125 mm	1.750"	7.665"	1/2" / M12	└─ Ø 0.813" x 0.296" DP / 0.531" Thru	100 mm	Haas VF2, Mazak VC-EZ 16
							125 mm	Brother D2 (450 mm table depth)
TL6HCS Hydraulic	80 mm	N/A	1.750"	9.688"	1/2" / M12	└─ Ø 0.813" x 0.296" DP / 0.531" Thru	80 mm	Haas VF3 / VF4 / VF5, Mazak VC-EZ 20/26